

You Will Need: Leveler, microfiber cloth (recommended)

## Your **Premiere Conversion Top** Curling Game

## To Complete the Table Setup

- Using two people, carefully lift and place framed playing surface onto your own support table
- You can now level your table using shims if your base table is not level. The use of a leveller (not
  included) will ensure a level playing surface. Rocks will slide straight down the center line if table
  is levelled correctly. When levelling the table, position the leveller at various points on top of the
  table's frame and NOT the playing surface.
- Conversion tops sit well on top of a pool table. Be sure to cover your pool table's rails with a table cover prior to placing your conversion top.
  - \* If setting the conversion top on another base table surface type such as a dining table or shuffleboard, you might need to brace/suspend the sides of the frame of the conversion top to sit above your base table's surface to avoid having the curl brackets under the table make contact with your table. The use of shims might also be required if your base table is not level.

## Preparing Your Table for First Play: (Applies to all Models)

- A. Using the supplied specially formulated wax spray, apply sparingly to the table surface, then using a soft cloth, gently spread evenly all over. Allow surface to dry 2-3 minutes.
- B. Apply the supplied polymer Pebble liberally and evenly over the table surface making sure there are no bald spots.
- C. The supplied stone holder also acts as a tool for evenly redistributing the pebble during game play where pebble may shift and bare spots may appear as stones glide over it.

- D. Each game table features our patented Adjustable Curl brackets located at the bottom of your table. 8' models feature 4 brackets and 10' models feature 6. They arrive to you factory set to generate the most commonly preferred amount of stone curl to the center button. Tighten slowly and by the same amount each bracket screw to evenly create more curl along the board if desired. Loosen the screws evenly to generate less curl if desired.
- E. <u>Scoreboard</u>; The scoreboard includes a marker and eraser brush. Wet brush to erase game scores promptly after game is over. Do not use permanent marker.
  - \* Replacement wax and pebble can be ordered online are is available on the accessories page of our website

Maintenance (Over time household dust and pet hairs will stick to the playing surface and may affect play. We recommend covering the table when not in use)

Wax only need be applied occasionally, if table appears dirty or in dry seasons. To apply wax, follow these instructions;

- Clear the game surface of all pebble using the included board sweep accessory (#9)
- Brush or wipe table with a clean dry cloth
- Wipe surface clean with a damp cloth
- Wipe surface dry with a clean dry microfiber cloth
- Apply thin, even coat of table wax (holding spray nozzle approximately 12" above table surface)
- Allow wax to set for 2 minutes
- Buff lightly with clean dry microfiber cloth
- Re-apply a thin layer of pebble (For best results, pour the pebble, do not shake)

## **Trouble Shooting**

If playing surface is not functioning properly, please ensure that;

- Game table is level
- Surface is clean
- Bottoms of rocks are clean
- Room temperature should be around 20\*C/68\*F for optimal play

You're now ready to play. Have fun!

**Cool Curling**